

Menu użytkownika (tylko CD-2502 i CD-3100)

Menu to jest dostępne w systemach o nazwie 2502 lub 3100. Aby sprawdzić z jakim systemem mamy do czynienia należy wybrać na klawiaturze panelu 4 razy przycisk 9, po chwili na wyświetlaczu panela pojawi się nazwa systemu a następnie wersja oprogramowania.

Korzystając z klawiatury domofonu (dotyczy wejścia podrzędnego) lokator może zmienić niektóre parametry pracy domofonu takie jak:

- ton wywołania,
- głośność,
- liczba dzwonek,
- kod zamka szyfrowego,
- zarejestrować nowe klucze elektroniczne.

Aby dokonać zmian lokator musi aktywować menu użytkownika. Potrzebna jest do tego pomoc osoby znajdującej się w mieszkaniu.

Uruchomienie menu użytkownika:

- Nawiązać połączenie z lokalem (tylko z panela podrzędnego).
- Wcisnąć przycisk ze znakiem klucza i wciąż trzymając poprosić osobę w mieszkaniu, aby pięciokrotnie nacisnęła przycisk zaczepu. Aktywowanie funkcji sygnalizowane jest trzema krótkimi sygnałami w słuchawce unifonu i panelu zewnętrznym oraz chwilowym pojawieniem się komunikatu [OPC].
- Zakończyć rozmowę.
- Wybrać numer lokalu, a następnie wcisnąć klawisz KLUCZ oraz wprowadzić kod zamka szyfrowego. Na wyświetlaczu pojawi się menu użytkownika, w którym możliwa jest edycja parametrów (patrz rysunek poniżej).



[1] Pierwszy znak na wyświetlaczu określa ton wywołania (0...7). Sygnał wywołania można zmieniać, wciskając klawisz oznaczony numerem [1].

[2] Drugi znak na wyświetlaczu określa głośność wywołania (G - głośny, N - narastający, C - cichy, U - umiarkowany). Wybór sygnału narastającego ma sens przy liczbie sygnałów wywołania większej niż 1. Głośność zmienia się klawiszem [2].

[3] Trzeci znak na wyświetlaczu oznacza liczbę dzwonek (decyduje o tym, jak długo dzwoni unifon). Liczbę sygnałów zmienia się klawiszem [3].

Zmiana kodu zamka szyfrowego

Aby zmienić kod zamka szyfrowego należy uruchomić menu użytkownika i wybrać klawisz [0]. Na chwilę pojawią się komunikaty [NEU], [CODE], a następnie cztery poziome kreski, po czym należy wprowadzić nowy kod zamka szyfrowego. Nowe hasło należy wprowadzić dwukrotnie. **Opcja zmiany kodu przez użytkownika może być zablokowana przez instalatora!**

Rejestrowanie nowego klucza elektronicznego

W menu użytkownika wybrać numer 8, na wyświetlaczu pojawi się komunikat [ADD]. Do czytnika przyłożyć klucz elektroniczny. Komunikat [NEU] oznacza, że klucz został zapisany w pamięci z przypisaniem do lokalu. Jeżeli do czytnika został przyłożony zarejestrowany wcześniej klucz, na wyświetlaczu pojawi się komunikat [OLD].

Wyjście z menu użytkownika

Aby wyjść z edycji menu użytkownika (nie wychodząc z całej procedury) w celu sprawdzenia działania nastaw oraz późniejszego dokonania ewentualnych zmian wciskamy klawisz KLUCZ. Istnieje wówczas możliwość nawiązywania połączeń.

Aby definitywnie wyjść z całej procedury wciskamy klawisz [C]. W tym przypadku ponowne wejście do menu wymaga powtórzenia całej procedury od początku.

Po upływie czasu bezczynności około 4 minut dostęp do menu użytkownika zostaje wyłączony automatycznie.

Konieczność współpracy w tej procedurze drugiej osoby została wprowadzona w celu uniemożliwienia nieautoryzowanych zmian parametrów pracy domofonu.

Menu użytkownika (tylko CD-2502 i CD-3100)

Menu to jest dostępne w systemach o nazwie 2502 lub 3100. Aby sprawdzić z jakim systemem mamy do czynienia należy wybrać na klawiaturze panelu 4 razy przycisk 9, po chwili na wyświetlaczu panela pojawi się nazwa systemu a następnie wersja oprogramowania.

Korzystając z klawiatury domofonu (dotyczy wejścia podrzędnego) lokator może zmienić niektóre parametry pracy domofonu takie jak:

- ton wywołania,
- głośność,
- liczba dzwonek,
- kod zamka szyfrowego,
- zarejestrować nowe klucze elektroniczne.

Aby dokonać zmian lokator musi aktywować menu użytkownika. Potrzebna jest do tego pomoc osoby znajdującej się w mieszkaniu.

Uruchomienie menu użytkownika:

- Nawiązać połączenie z lokalem (tylko z panela podrzędnego).
- Wcisnąć przycisk ze znakiem klucza i wciąż trzymając poprosić osobę w mieszkaniu, aby pięciokrotnie nacisnęła przycisk zaczepu. Aktywowanie funkcji sygnalizowane jest trzema krótkimi sygnałami w słuchawce unifonu i panelu zewnętrznym oraz chwilowym pojawieniem się komunikatu [OPC].
- Zakończyć rozmowę.
- Wybrać numer lokalu, a następnie wcisnąć klawisz KLUCZ oraz wprowadzić kod zamka szyfrowego. Na wyświetlaczu pojawi się menu użytkownika, w którym możliwa jest edycja parametrów (patrz rysunek poniżej).



- [1] Pierwszy znak na wyświetlaczu określa ton wywołania (0...7). Sygnał wywołania można zmieniać, wciskając klawisz oznaczony numerem [1].
- [2] Drugi znak na wyświetlaczu określa głośność wywołania (G - głośny, N - narastający, C - cichy, U - umiarkowany). Wybór sygnału narastającego ma sens przy liczbie sygnałów wywołania większej niż 1. Głośność zmienia się klawiszem [2].
- [3] Trzeci znak na wyświetlaczu oznacza liczbę dzwonek (decyduje o tym, jak długo dzwoni unifon). Liczbę sygnałów zmienia się klawiszem [3].

Zmiana kodu zamka szyfrowego

Aby zmienić kod zamka szyfrowego należy uruchomić menu użytkownika i wybrać klawisz [0]. Na chwilę pojawią się komunikaty [NEU], [CODE], a następnie cztery poziome kreski, po czym należy wprowadzić nowy kod zamka szyfrowego. Nowe hasło należy wprowadzić dwukrotnie. **Opcja zmiany kodu przez użytkownika może być zablokowana przez instalatora!**

Rejestrowanie nowego klucza elektronicznego

W menu użytkownika wybrać numer 8, na wyświetlaczu pojawi się komunikat [ADD]. Do czytnika przyłożyć klucz elektroniczny. Komunikat [NEU] oznacza, że klucz został zapisany w pamięci z przypisaniem do lokalu. Jeżeli do czytnika został przyłożony zarejestrowany wcześniej klucz, na wyświetlaczu pojawi się komunikat [OLD].

Wyjście z menu użytkownika

Aby wyjść z edycji menu użytkownika (nie wychodząc z całej procedury) w celu sprawdzenia działania nastaw oraz późniejszego dokonania ewentualnych zmian wciskamy klawisz KLUCZ. Istnieje wówczas możliwość nawiązywania połączeń.

Aby definitywnie wyjść z całej procedury wciskamy klawisz [C]. W tym przypadku ponowne wejście do menu wymaga powtórzenia całej procedury od początku.

Po upływie czasu bezczynności około 4 minut dostęp do menu użytkownika zostaje wyłączony automatycznie.

Konieczność współpracy w tej procedurze drugiej osoby została wprowadzona w celu uniemożliwienia nieautoryzowanych zmian parametrów pracy domofonu.

Menu użytkownika (tylko CD-2502 i CD-3100)

Menu to jest dostępne w systemach o nazwie 2502 lub 3100. Aby sprawdzić z jakim systemem mamy do czynienia należy wybrać na klawiaturze panelu 4 razy przycisk 9, po chwili na wyświetlaczu panela pojawi się nazwa systemu a następnie wersja oprogramowania.

Korzystając z klawiatury domofonu (dotyczy wejścia podrzędnego) lokator może zmienić niektóre parametry pracy domofonu takie jak:

- ton wywołania,
- głośność,
- liczba dzwonek,
- kod zamka szyfrowego,
- zarejestrować nowe klucze elektroniczne.

Aby dokonać zmian lokator musi aktywować menu użytkownika. Potrzebna jest do tego pomoc osoby znajdującej się w mieszkaniu.

Uruchomienie menu użytkownika:

- Nawiązać połączenie z lokalem (tylko z panela podrzędnego).
- Wcisnąć przycisk ze znakiem klucza i wciąż trzymając poprosić osobę w mieszkaniu, aby pięciokrotnie nacisnęła przycisk zaczepu. Aktywowanie funkcji sygnalizowane jest trzema krótkimi sygnałami w słuchawce unifonu i panelu zewnętrznym oraz chwilowym pojawieniem się komunikatu [OPC].
- Zakończyć rozmowę.
- Wybrać numer lokalu, a następnie wcisnąć klawisz KLUCZ oraz wprowadzić kod zamka szyfrowego. Na wyświetlaczu pojawi się menu użytkownika, w którym możliwa jest edycja parametrów (patrz rysunek poniżej).



- [1] Pierwszy znak na wyświetlaczu określa ton wywołania (0...7). Sygnał wywołania można zmieniać, wciskając klawisz oznaczony numerem [1].
- [2] Drugi znak na wyświetlaczu określa głośność wywołania (G - głośny, N - narastający, C - cichy, U - umiarkowany). Wybór sygnału narastającego ma sens przy liczbie sygnałów wywołania większej niż 1. Głośność zmienia się klawiszem [2].
- [3] Trzeci znak na wyświetlaczu oznacza liczbę dzwonek (decyduje o tym, jak długo dzwoni unifon). Liczbę sygnałów zmienia się klawiszem [3].

Zmiana kodu zamka szyfrowego

Aby zmienić kod zamka szyfrowego należy uruchomić menu użytkownika i wybrać klawisz [0]. Na chwilę pojawią się komunikaty [NEU], [CODE], a następnie cztery poziome kreski, po czym należy wprowadzić nowy kod zamka szyfrowego. Nowe hasło należy wprowadzić dwukrotnie. **Opcja zmiany kodu przez użytkownika może być zablokowana przez instalatora!**

Rejestrowanie nowego klucza elektronicznego

W menu użytkownika wybrać numer 8, na wyświetlaczu pojawi się komunikat [ADD]. Do czytnika przyłożyć klucz elektroniczny. Komunikat [NEU] oznacza, że klucz został zapisany w pamięci z przypisaniem do lokalu. Jeżeli do czytnika został przyłożony zarejestrowany wcześniej klucz, na wyświetlaczu pojawi się komunikat [OLD].

Wyjście z menu użytkownika

Aby wyjść z edycji menu użytkownika (nie wychodząc z całej procedury) w celu sprawdzenia działania nastaw oraz późniejszego dokonania ewentualnych zmian wciskamy klawisz KLUCZ. Istnieje wówczas możliwość nawiązywania połączeń.

Aby definitywnie wyjść z całej procedury wciskamy klawisz [C]. W tym przypadku ponowne wejście do menu wymaga powtórzenia całej procedury od początku.

Po upływie czasu bezczynności około 4 minut dostęp do menu użytkownika zostaje wyłączony automatycznie.

Konieczność współpracy w tej procedurze drugiej osoby została wprowadzona w celu uniemożliwienia nieautoryzowanych zmian parametrów pracy domofonu.

Menu użytkownika (tylko CD-2502 i CD-3100)

Menu to jest dostępne w systemach o nazwie 2502 lub 3100. Aby sprawdzić z jakim systemem mamy do czynienia należy wybrać na klawiaturze panelu 4 razy przycisk 9, po chwili na wyświetlaczu panela pojawi się nazwa systemu a następnie wersja oprogramowania.

Korzystając z klawiatury domofonu (dotyczy wejścia podrzędnego) lokator może zmienić niektóre parametry pracy domofonu takie jak:

- ton wywołania,
- głośność,
- liczba dzwonek,
- kod zamka szyfrowego,
- zarejestrować nowe klucze elektroniczne.

Aby dokonać zmian lokator musi aktywować menu użytkownika. Potrzebna jest do tego pomoc osoby znajdującej się w mieszkaniu.

Uruchomienie menu użytkownika:

- Nawiązać połączenie z lokalem (tylko z panela podrzędnego).
- Wcisnąć przycisk ze znakiem klucza i wciąż trzymając poprosić osobę w mieszkaniu, aby pięciokrotnie nacisnęła przycisk zaczepu. Aktywowanie funkcji sygnalizowane jest trzema krótkimi sygnałami w słuchawce unifonu i panelu zewnętrznym oraz chwilowym pojawieniem się komunikatu [OPC].
- Zakończyć rozmowę.
- Wybrać numer lokalu, a następnie wcisnąć klawisz KLUCZ oraz wprowadzić kod zamka szyfrowego. Na wyświetlaczu pojawi się menu użytkownika, w którym możliwa jest edycja parametrów (patrz rysunek poniżej).



- [1] Pierwszy znak na wyświetlaczu określa ton wywołania (0...7). Sygnał wywołania można zmieniać, wciskając klawisz oznaczony numerem [1].
- [2] Drugi znak na wyświetlaczu określa głośność wywołania (G - głośny, N - narastający, C - cichy, U - umiarkowany). Wybór sygnału narastającego ma sens przy liczbie sygnałów wywołania większej niż 1. Głośność zmienia się klawiszem [2].
- [3] Trzeci znak na wyświetlaczu oznacza liczbę dzwonek (decyduje o tym, jak długo dzwoni unifon). Liczbę sygnałów zmienia się klawiszem [3].

Zmiana kodu zamka szyfrowego

Aby zmienić kod zamka szyfrowego należy uruchomić menu użytkownika i wybrać klawisz [0]. Na chwilę pojawią się komunikaty [NEU], [CODE], a następnie cztery poziome kreski, po czym należy wprowadzić nowy kod zamka szyfrowego. Nowe hasło należy wprowadzić dwukrotnie. **Opcja zmiany kodu przez użytkownika może być zablokowana przez instalatora!**

Rejestrowanie nowego klucza elektronicznego

W menu użytkownika wybrać numer 8, na wyświetlaczu pojawi się komunikat [ADD]. Do czytnika przyłożyć klucz elektroniczny. Komunikat [NEU] oznacza, że klucz został zapisany w pamięci z przypisaniem do lokalu. Jeżeli do czytnika został przyłożony zarejestrowany wcześniej klucz, na wyświetlaczu pojawi się komunikat [OLD].

Wyjście z menu użytkownika

Aby wyjść z edycji menu użytkownika (nie wychodząc z całej procedury) w celu sprawdzenia działania nastaw oraz późniejszego dokonania ewentualnych zmian wciskamy klawisz KLUCZ. Istnieje wówczas możliwość nawiązywania połączeń.

Aby definitywnie wyjść z całej procedury wciskamy klawisz [C]. W tym przypadku ponowne wejście do menu wymaga powtórzenia całej procedury od początku.

Po upływie czasu bezczynności około 4 minut dostęp do menu użytkownika zostaje wyłączony automatycznie.

Konieczność współpracy w tej procedurze drugiej osoby została wprowadzona w celu uniemożliwienia nieautoryzowanych zmian parametrów pracy domofonu.

User`s menu (only CD-2502 and CD-3100)

This menu is available in systems named 2502 or 3100. In order to check which system is present, the button [9] should be chosen four times on the panel keyboard, after a moment on the panel display the system name and software version will appear.


Occupant can change from the entry phone keyboard (this refers to subordinate entrance) some operation parameters such as:

- calling tone,
- volume,
- number of rings,
- code of coded lock,
- register new electronic keys.

To make changes an occupant must activate user's menu. Some person in the apartment must help.

User`s menu activation:

- Make connection with the apartment (only from the subordinate entrance panel).
- Press button with a sign of a key (KEY) and while pressing it ask a person in the apartment to press the catch button five times. Activation of a function is signaled with three short signals in uniphone receiver and external panel and also with message [OPC] displayed temporarily on the external panel`s display.
- Finish the conversation.
- Enter the apartment number, press button with a sign of a key (KEY) and enter the code of coded lock. On the display user's menu will be shown, where parameter`s edition is available. (see hereafter dwg.).

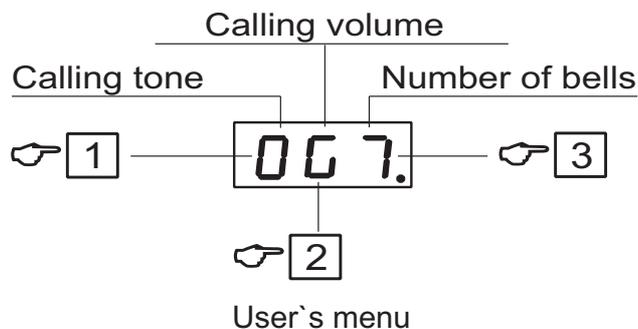

[1] The first sign on the display defines calling tone (0...7). Calling signal can be changed by pressing the key marked with number [1].

[2] The second sign on the display defines volume of calling signal (G - loud, N - increasing, C - soft, U - moderate). Selection of increasing signal is sensible at the number of rings higher than 1. Volume is controlled with key [2].

[3] The third sign on the display defines the number of rings (decides how long the uniphone rings). Number of signals is controlled with key [3].

Change of coded lock code.

To change the code of coded lock, user's menu should be activated and key [0] should be selected. For a moment messages [NEU] and [CODE] and then four horizontal bars will appear and then new code of coded lock should be entered. New code should be entered twice. **Option of changing the code by the user can be blocked by an installing specialist!**

Registering of a new electronic key.

In user's menu after selecting 8, message [ADD] will appear on the display. Electronic key should be put to the reader. Message [NEU] means that key was recorded in memory and attributed to the apartment. If a key, which was recorded earlier is put to a reader, on the display message [OLD] will appear.

Exit from user`s menu

To exit from edition of user's menu (not to exit from the whole procedure) in order to check and to correct settings, press the key with a symbol of key [KEY]. There is a possibility to make a call. To finally exit from the whole procedure press the key [C]. In this case the second enter to the menu requires repeating the whole procedure from the beginning.

After about 4 minutes of inactivity, access to the user`s menu will be turn off automatically.

In this procedure the necessity of cooperation with other person has been introduced in order to prevent unauthorized changes of entry phone parameters.

User`s menu (only CD-2502 and CD-3100)

This menu is available in systems named 2502 or 3100. In order to check which system is present, the button [9] should be chosen four times on the panel keyboard, after a moment on the panel display the system name and software version will appear.


Occupant can change from the entry phone keyboard (this refers to subordinate entrance) some operation parameters such as:

- calling tone,
- volume,
- number of rings,
- code of coded lock,
- register new electronic keys.

To make changes an occupant must activate user's menu. Some person in the apartment must help.

User`s menu activation:

- Make connection with the apartment (only from the subordinate entrance panel).
- Press button with a sign of a key (KEY) and while pressing it ask a person in the apartment to press the catch button five times. Activation of a function is signaled with three short signals in uniphone receiver and external panel and also with message [OPC] displayed temporarily on the external panel`s display.
- Finish the conversation.
- Enter the apartment number, press button with a sign of a key (KEY) and enter the code of coded lock. On the display user's menu will be shown, where parameter`s edition is available. (see hereafter dwg.).

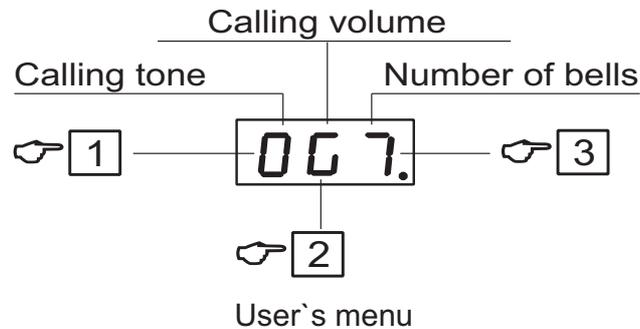

[1] The first sign on the display defines calling tone (0...7). Calling signal can be changed by pressing the key marked with number [1].

[2] The second sign on the display defines volume of calling signal (G - loud, N - increasing, C - soft, U - moderate). Selection of increasing signal is sensible at the number of rings higher than 1. Volume is controlled with key [2].

[3] The third sign on the display defines the number of rings (decides how long the uniphone rings). Number of signals is controlled with key [3].

Change of coded lock code.

To change the code of coded lock, user's menu should be activated and key [0] should be selected. For a moment messages [NEU] and [CODE] and then four horizontal bars will appear and then new code of coded lock should be entered. New code should be entered twice. **Option of changing the code by the user can be blocked by an installing specialist!**

Registering of a new electronic key.

In user's menu after selecting 8, message [ADD] will appear on the display. Electronic key should be put to the reader. Message [NEU] means that key was recorded in memory and attributed to the apartment. If a key, which was recorded earlier is put to a reader, on the display message [OLD] will appear.

Exit from user`s menu

To exit from edition of user's menu (not to exit from the whole procedure) in order to check and to correct settings, press the key with a symbol of key [KEY]. There is a possibility to make a call. To finally exit from the whole procedure press the key [C]. In this case the second enter to the menu requires repeating the whole procedure from the beginning.

After about 4 minutes of inactivity, access to the user`s menu will be turn off automatically.

In this procedure the necessity of cooperation with other person has been introduced in order to prevent unauthorized changes of entry phone parameters.

User`s menu (only CD-2502 and CD-3100)

This menu is available in systems named 2502 or 3100. In order to check which system is present, the button [9] should be chosen four times on the panel keyboard, after a moment on the panel display the system name and software version will appear.


Occupant can change from the entry phone keyboard (this refers to subordinate entrance) some operation parameters such as:

- calling tone,
- volume,
- number of rings,
- code of coded lock,
- register new electronic keys.

To make changes an occupant must activate user's menu. Some person in the apartment must help.

User`s menu activation:

- Make connection with the apartment (only from the subordinate entrance panel).
- Press button with a sign of a key (KEY) and while pressing it ask a person in the apartment to press the catch button five times. Activation of a function is signaled with three short signals in uniphone receiver and external panel and also with message [OPC] displayed temporarily on the external panel`s display.
- Finish the conversation.
- Enter the apartment number, press button with a sign of a key (KEY) and enter the code of coded lock. On the display user's menu will be shown, where parameter`s edition is available. (see hereafter dwg.).

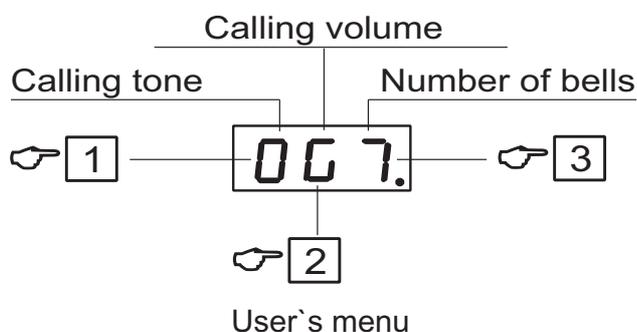

[1] The first sign on the display defines calling tone (0...7). Calling signal can be changed by pressing the key marked with number [1].

[2] The second sign on the display defines volume of calling signal (G - loud, N - increasing, C - soft, U - moderate). Selection of increasing signal is sensible at the number of rings higher than 1. Volume is controlled with key [2].

[3] The third sign on the display defines the number of rings (decides how long the uniphone rings). Number of signals is controlled with key [3].

Change of coded lock code.

To change the code of coded lock, user's menu should be activated and key [0] should be selected. For a moment messages [NEU] and [CODE] and then four horizontal bars will appear and then new code of coded lock should be entered. New code should be entered twice. **Option of changing the code by the user can be blocked by an installing specialist!**

Registering of a new electronic key.

In user's menu after selecting 8, message [ADD] will appear on the display. Electronic key should be put to the reader. Message [NEU] means that key was recorded in memory and attributed to the apartment. If a key, which was recorded earlier is put to a reader, on the display message [OLD] will appear.

Exit from user`s menu

To exit from edition of user's menu (not to exit from the whole procedure) in order to check and to correct settings, press the key with a symbol of key [KEY]. There is a possibility to make a call. To finally exit from the whole procedure press the key [C]. In this case the second enter to the menu requires repeating the whole procedure from the beginning.

After about 4 minutes of inactivity, access to the user`s menu will be turn off automatically.

In this procedure the necessity of cooperation with other person has been introduced in order to prevent unauthorized changes of entry phone parameters.

User`s menu (only CD-2502 and CD-3100)

This menu is available in systems named 2502 or 3100. In order to check which system is present, the button [9] should be chosen four times on the panel keyboard, after a moment on the panel display the system name and software version will appear.


Occupant can change from the entry phone keyboard (this refers to subordinate entrance) some operation parameters such as:

- calling tone,
- volume,
- number of rings,
- code of coded lock,
- register new electronic keys.

To make changes an occupant must activate user's menu. Some person in the apartment must help.

User`s menu activation:

- Make connection with the apartment (only from the subordinate entrance panel).
- Press button with a sign of a key (KEY) and while pressing it ask a person in the apartment to press the catch button five times. Activation of a function is signaled with three short signals in uniphone receiver and external panel and also with message [OPC] displayed temporarily on the external panel`s display.
- Finish the conversation.
- Enter the apartment number, press button with a sign of a key (KEY) and enter the code of coded lock. On the display user's menu will be shown, where parameter`s edition is available. (see hereafter dwg.).

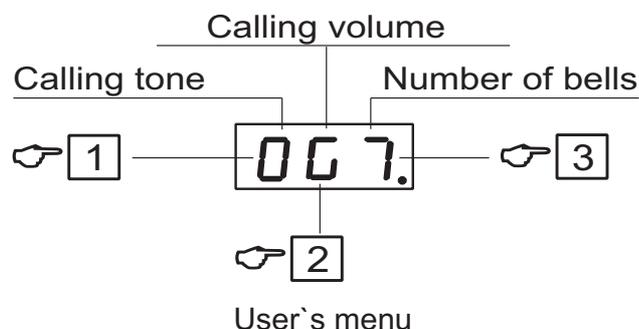

[1] The first sign on the display defines calling tone (0...7). Calling signal can be changed by pressing the key marked with number [1].

[2] The second sign on the display defines volume of calling signal (G - loud, N - increasing, C - soft, U - moderate). Selection of increasing signal is sensible at the number of rings higher than 1. Volume is controlled with key [2].

[3] The third sign on the display defines the number of rings (decides how long the uniphone rings). Number of signals is controlled with key [3].

Change of coded lock code.

To change the code of coded lock, user's menu should be activated and key [0] should be selected. For a moment messages [NEU] and [CODE] and then four horizontal bars will appear and then new code of coded lock should be entered. New code should be entered twice. **Option of changing the code by the user can be blocked by an installing specialist!**

Registering of a new electronic key.

In user's menu after selecting 8, message [ADD] will appear on the display. Electronic key should be put to the reader. Message [NEU] means that key was recorded in memory and attributed to the apartment. If a key, which was recorded earlier is put to a reader, on the display message [OLD] will appear.

Exit from user`s menu

To exit from edition of user's menu (not to exit from the whole procedure) in order to check and to correct settings, press the key with a symbol of key [KEY]. There is a possibility to make a call. To finally exit from the whole procedure press the key [C]. In this case the second enter to the menu requires repeating the whole procedure from the beginning.

After about 4 minutes of inactivity, access to the user`s menu will be turn off automatically.

In this procedure the necessity of cooperation with other person has been introduced in order to prevent unauthorized changes of entry phone parameters.